

Penpower Super ScanEYE

User Manual

Version 2.4

Date: April, 2011

Contents

Chapter 1 Product Features	1-1
Chapter 2 Installation	2-1
2.1 Accessories	2-1
2.2 Product Contents	2-1
2.3 System Requirements	2-1
2.4 Hardware Installation	2-2
2.5 Super ScanEYE Installation	2-3
Chapter 3 Main Function	3-1
3.1 Hardware Button	3-1
3.2 Main Function Flow Chart	3-2
3.3 Addition Function Flow Chart	3-3
3.4 Main Function Layout	3-4
Chapter 4 Dictionary Program	4-1
4.1 Scanning Techniques	4-1
4.2 Single Word Translation	4-3
4.3 Phrase Translation	4-5
4.4 Sentence Translation	4-7
4.5 Dictionary Program Function	4-9
Chapter 5 Scan and Store	5-1
5.1 Edit Current File	5-1
5.2 Creating New File	5-1
5.3 Open File	5-2
5.4 Delete File	5-2
5.5 Set Scanning Direction	5-2
5.6 Set New File Language	5-2
5.7 Beam Current File	5-3

Chapter 6 Data Transfer	6-1
6.1 Super ScanEye Program	6-1
6.2 Connecting Super ScanEYE to the PC	6-2
Connection Wizard	6-2
Manual Connection	6-4
6.3 Data Transfer	6-6
Data Transfer Setting.....	6-6
Transfer Data.....	6-7
6.4 Editing data Within Super ScanEYE Manager	6-8
Chapter 7 Scan to PC	7-1
Chapter 8 Additional Functions	8-1
8.1 Install Add-on Programes.....	8-1
8.2 Address Book Component	8-3
New Address	8-3
View Addresses	8-4
Settings	8-5
Beaming	8-5
Edit Address Book in Super ScanEYE Manager	8-6
8.3 Internet Link Component	8-7
New Link	8-7
View Link	8-7
Settings	8-7
Edit Internet Link in Super ScanEYE Manager	8-8
8.4 Table Component.....	8-9
Edit Current File.....	8-9
Settings	8-10
New File	8-10
Open File.....	8-10
Delete File	8-10
Edit Table in Super ScanEYE Manager	8-11
8.5 Add/Delete Software.....	8-12
8.6 Install External Dictionary.....	8-13
8.7 Transtar.....	8-14

Chapter 1 Product Features

Scanning/Recognition/Translation 3-In-1

Combining the functions of scanning, recognition, translation, it provides immediate translation once scanning has completed. The Super ScanEYE can also be used to scan words directly into application programs.

Scanning Input Method

The Super ScanEYE's memory enables quick scanning and input of words, even articles.

Super ScanEYE is Light in Weight and User-Friendly

It provides great assistance when users are gathering or translating data.

Human Voice Reading for English Document

Human voice reading is available for all English sentences or single words that are scanned.

Combination of Address Book, Internet Link and Tables

Super ScanEYE can scan name card, communication document, for example, email, documents or Internet Link and save these data in the appropriate file type.

Sophisticated Recognition System

Using the most advanced words recognition techniques availability globally, it can recognize both horizontally aligned or vertically aligned words. Right-handed or left-handed users setting are available too.

Computer Connection and Data Organization

By connecting the Super ScanEYE to the computer, direct transfer of data into the computer and backup of data is easy.

Extra Software

The installation CD includes an extra translation software, Transtar, which can help to shorten the translation time.



Chapter 2 System Installation

2.1 Accessories

Super ScanEYE	Registration Card
Registration Card	User Manual
2 AAA batteries	Installation CD
Earpiece	USB Conversion Cable

2.2 Product Properties

CPU: ARM7TDMI

Computer Cable Connection: USB conversion cable.

Scanner Head: 128 line and image sensor.

Scanning Analysis: 400 DPI.

Display Screen: 61mm × 20mm.

Power: 2 × 1.5 V AAA batteries.

Weight: 90g (without batteries).

Size: 163mm × 38mm × 23mm.

2.3 System Requirement

Traditional Chinese Windows2000 /XP

16MB RAM.


8MB free hard drive space.

CD ROM (program installation).


Computer must have USB port.



2.4 Hardware Installation

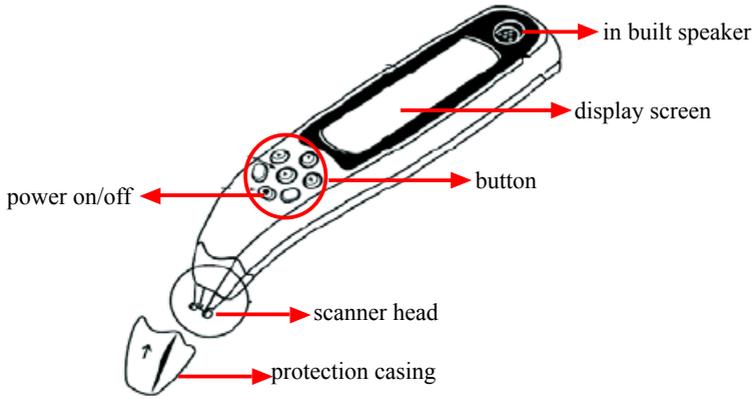

Take off Super ScanEYE battery cover and put in 2 AAA batteries.

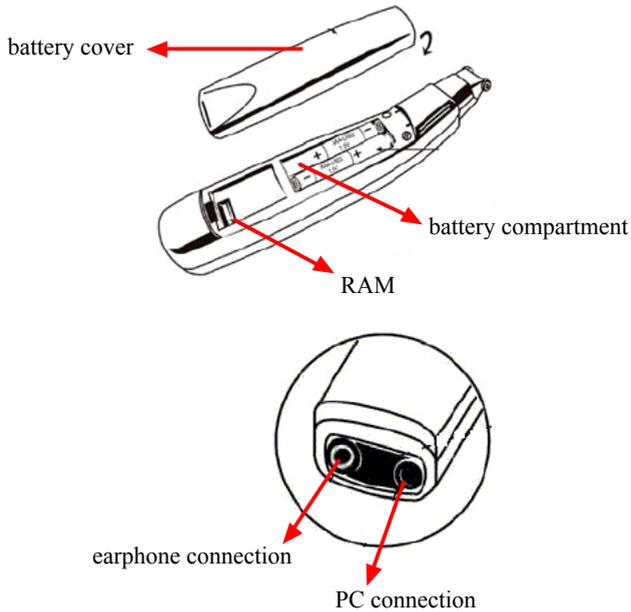

Note: Please remove the protection casing before you start to scan.

2.5 Super ScanEYE Installation

Step 1: Set up USB-to-Serial Drive

1. Insert the installation CD-ROM, the system will automatically load the installation screen. Select “Super ScanEYE” (Figure 1). Next select “I accept the terms of the licence agreement” (Figure 2).

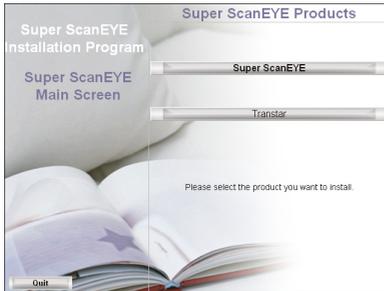


Figure 1

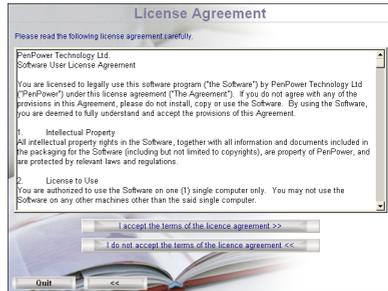


Figure 2

2. Enter the selection screens for installation steps, and select “Install and Set Up Super ScanEYE”. Make sure that the USB cable is not connected to the computer, if it is, disconnect the cable and click on “Install Driver” to install the USB cable driver.

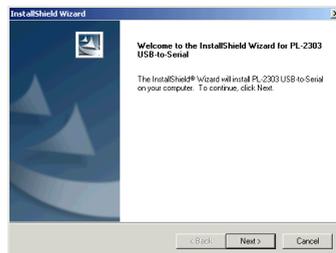


Figure 3



Figure 4

3. Click “Next” to begin installation.





- Click “Finish” to end the installation and restart the computer. You can also choose to restart your computer later.



- When the software installation is completed, click on the [>>] button in Figure 4, and Figure 5 will appear. Refer to the instructions in Figure 5 and plug the USB connector into the computer’s USB port. Then click on [>>] button to continue Step 2 of 2 for installing Desktop Application.

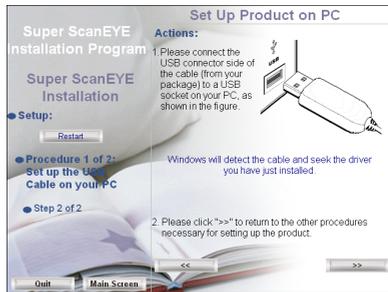


Figure 5


Step 2: Install the Desktop Application

- Select “Install Desktop Application” in Figure 6 and start installation.




Figure 6

2. Click “Next” to begin installation.

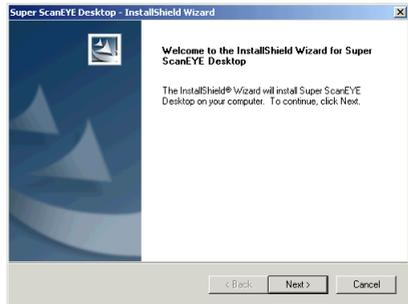


3. Select the folder destination and click “Next” to continue.

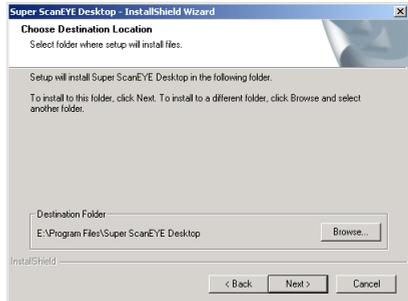

4. Please enter the user name and the company name, then click “Next”.





5. Please check the duplicate file setting, then click “Next” to continue.

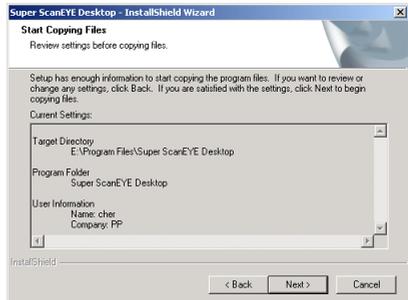



6. The system will enquire whether you want to load the Super ScanEYE controller automatically when starting the computer. Click “Yes” will enable the Super ScanEYE controller to be activated automatically when you switch on the computer.
7. Click “Finish” to end the Super ScanEYE Controller installation. The “Super ScanEYE Desktop Application” program will be shown when you click on “Start” / “Program”. The Super ScanEYE Desktop Application icon will also appear at the bottom right corner of the computer screen.

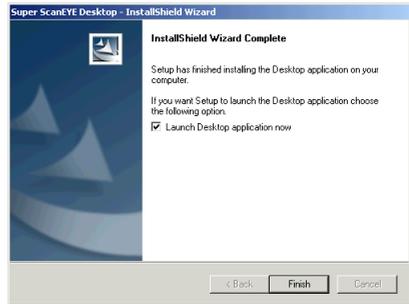


8. Click on [>>] button in Diagram 6 and return to Diagram 3, where you can continue to establish the connection between Super ScanEYE and the computer.

Initializing Super ScanEYE

Click on the [>>] button in Figure 6 to open the Help Screen for “How to Use the Pen with the PC”.

1. Insert the USB connector side to a USB socket on your PC.
2. Connect the plug side to the PC-Link connector socket on your Pen.
3. Make sure that Desktop application is running. If not, execute “Start”/ “Programs”/ “Super ScanEYE”/ “Super ScanEYE” to run it.

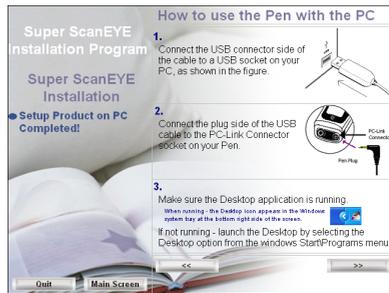

Note: For how to create the link between Super ScanEYE and your PC, refer to Section 6.2. and use the “Communications Wizard” to establish connection. And please refer to Chapter 8 for the additional software installation, such as Transtar.

Chapter 3 Main Function

3.1 Hardware Button



- ⏻: power on/off
- ⏎: confirm, select or proceed to next screen
- ⏪: cancel, back to previous screen
- ⬆: up
- ⬇: down
- ➡: right
- ⬅: left

Use the buttons to explore and select the functions

Select the function

Use the direction button and move to the required function. Press **⏎** to confirm your choice. Press **⏪** if you want to go back to the previous menu.

Setting Interface Language


When you initiate the scanner, please set the interface language first. There are three languages provided: English, Traditional Chinese, and Simplified Chinese. Press **⬆** / **⬇** to select one.

Error Message


When error message appears due to improper usage, such as scanning too fast, press **⏎** to select the error message.



3.2 Main Function Flow Chart

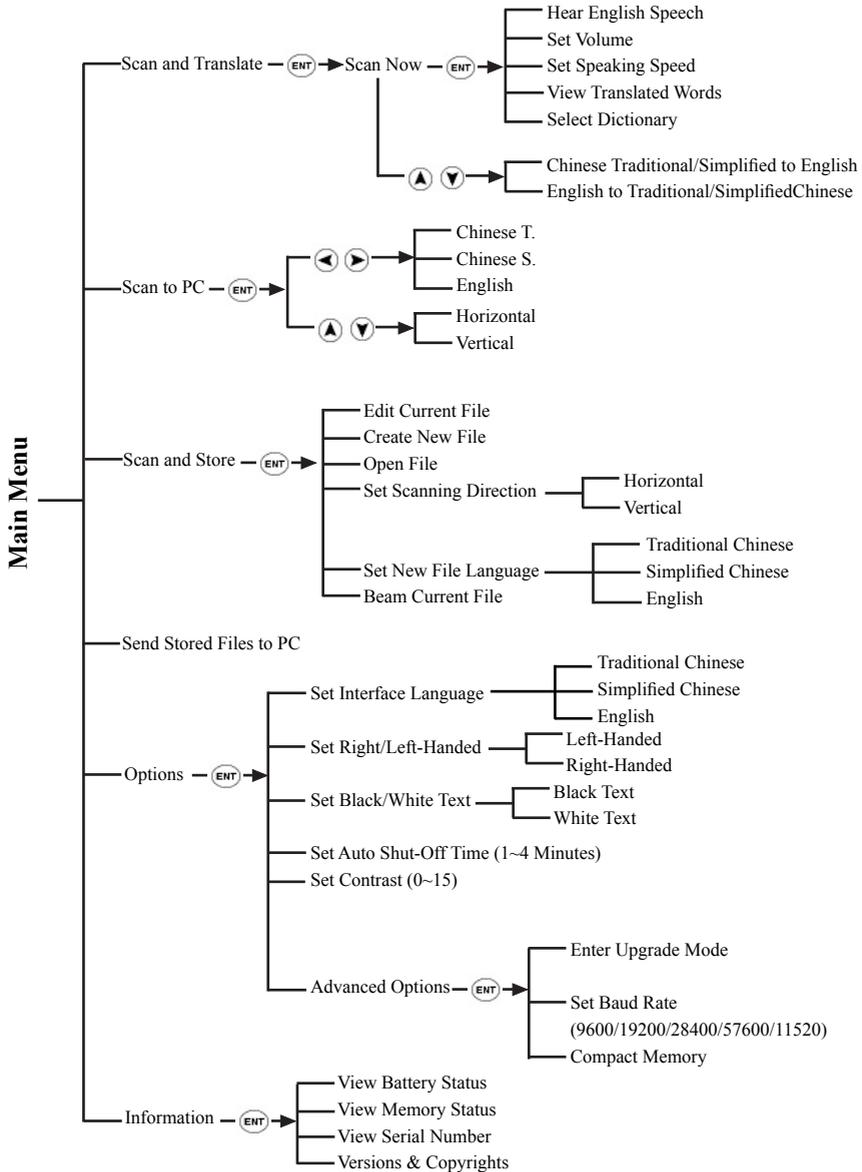

3.3 Addition Function Flow Chart

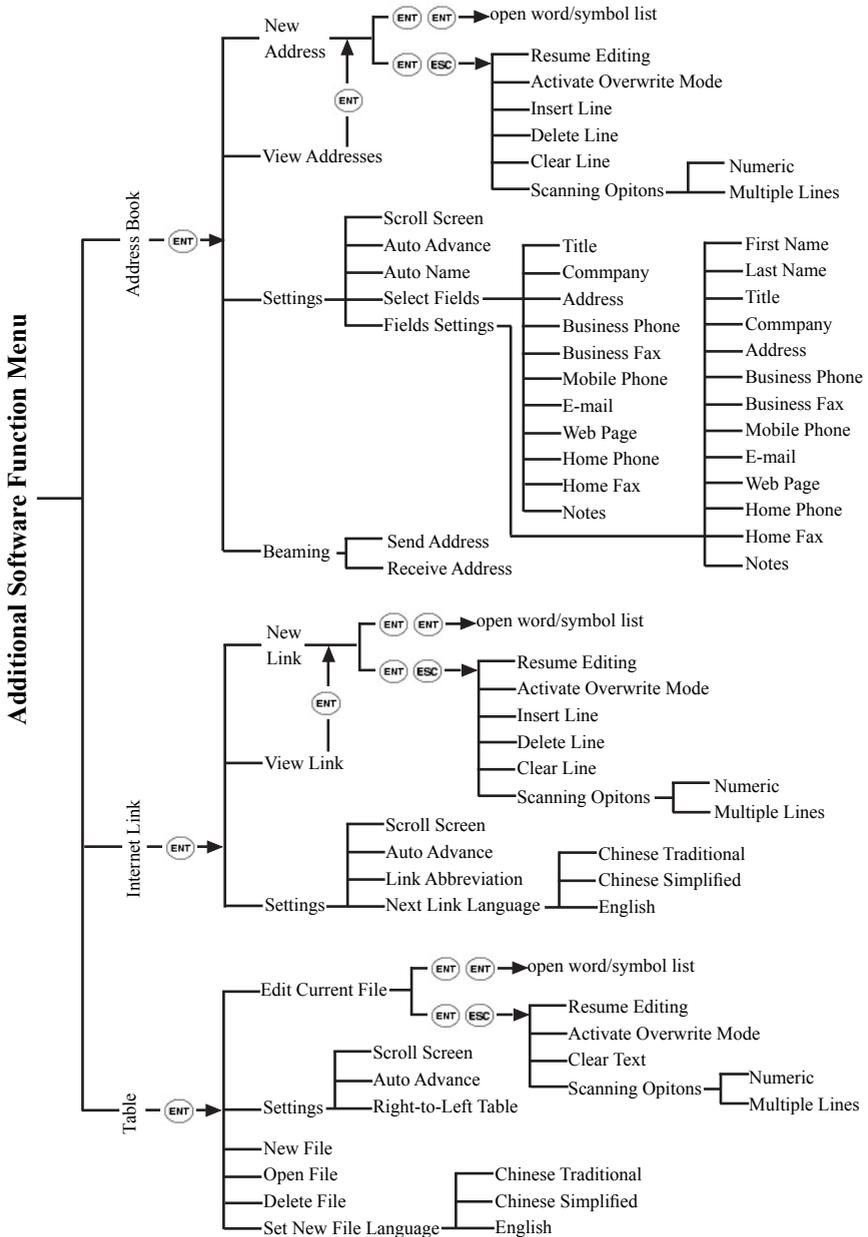



3.3 Main Function Layout

Dictionary Program



Translation from English to To Traditional/Simplified Chinese after Super ScanEYE scan in the English document or vice versa. (Please refer to Chapter 4: Dictionary Program.)

Scanning Input To Computer



Connect the Super ScanEYE to the computer using the connection cable allows direct input transfer into the computer application program. (Please refer to Chapter 7: Scanning to computer.)

Scan and Store



Input and edit data (Please refer to Chapter 5: Scan and Store.)

Data Transfer



To synchronize or transfer the data between Super ScanEYE notebook and the computer. (Please refer to Chapter 6: Data Transfer.)

Selection



User can select the interface language left-handed or right-handed usage.

1. Interface Language

Change the interface language. The default language is traditional Chinese.

2. Left-hand/Right-hand Usage

Set the left-hand/right-hand usage. The default setting is right-hand usage, scanning from left to right. If the setting is left-hand usage, please scan from right to left.

3. Reverse White Setting

Select the scanning of usual words or scanning of reverse white words. If the setting is scanning of reverse white words, Super ScanEYE can scan in light coloured words with dark coloured background.

4. Automatic Power Off Time

By default, if the device is not in use for 60 seconds, it will power off automatically. The default power off time can be altered and reset.

5. Contrast Setting

Set the contrast and brightness of the device. The bigger the number, the darker the display screen.

6. Other Setting

Update setting, data transfer speed setting and data compress setting are available. (Please refer to Chapter 6: data transfer.)

Information



Displays SuperScaEYE hardware information.

1. Battery Status

Examine how much power is left for the battery.

2. Memory Status

Examine the memory usage by diagrams indicating the space in use and space unused.

3. Super ScanEYE Serial Number

Examine the Super ScanEYE serial number.

4. Read Me

Examine the Super ScanEYE model number, copyright information and the operating environment model number.



Chapter 4 Dictionary Program

Dictionary program translate between English to Traditional/Simplified Chinese. Using Super ScanEYE to scan English document directly and translate it instantly to Chinese or vice versa.

4.1 Scanning Techniques

Penpower Super ScanEYE can be used to scan many kinds of character. The size must be between 6 and 22 biggest font 8mm). It can scan in any words with different background colours except 'red words with white background' or vice versa and also 'blue words with black background' and vice versa.

1. Take off the protection cap, then press  to power on.
2. Select "Scan and Translate" from the menu. Press  when the screen shows "Scan Now" message, and the scanner is ready for scanning. As the red light at the scanner head is blinking, this indicates that scanning can begin. Press  for options.



Press the left-right direction button to select Traditional/Simplified Chinese to English dictionary or English to Traditional/Simplified Chinese dictionary. Under the English to Traditional/Simplified dictionary mode, the English words can be scanned and translated into Traditional/Simplified readily. Under the Traditional/Simplified Chinese to English dictionary mode, the Traditional/Simplified words can be scanned and translated into English readily.



Attention: The red light should be blinking during scanning. Otherwise, please power off the scanner and power on again.

3. Left-hand/Right-hand Setting: If you are using your left hand to operate the scanner, please set to left-hand usage in the setting. Please refer to Chapter 3, Section 3.3.
4. Scanning Direction Setting: Default setting is auto-detection. Users can follow the words direction and do a vertical or horizontal scanning, so as to increase the scanning recognition speed. Please to Chapter 5 Section 5.5.



5. Word Scanning

- * Place scanner head at the starting word position at about half an inch from it.
- * Hold the Super ScanEYE and tilt the scanner head at an angle between 75-90 degree, allowing the scanner head to touch the article lightly.
- * For horizontally aligned words, scan from left to right. If left-hand option has been set, scan from right to left.
- * For vertically aligned words, scan from top to bottom, keeping the scanner head consistently at the center of the vertically aligned words.
- * When the scanner head has scanned in the final word, remove the scanner from the article and the scan in words and its translation will be shown on the screen.

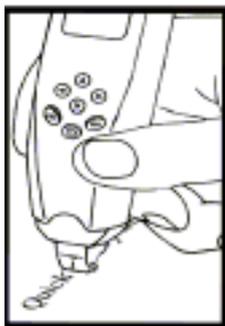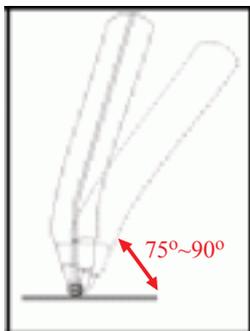

6. Rescan the wrong words


Rescan the wrong words: If there are errors in the words being scanned, please follow step 5 above to rescan the incorrect words.

4.2 Single Word Translation

Translation From Single Traditional Chinese Word To English

If the Traditional Chinese word is scanned one at a time, the English translation will be shown after the Traditional Chinese word.

For example, when the Traditional Chinese word “掃” is scanned, the translation screen display will be as shown below.




1. Different translations will be separated by the punctuation “;”. Use the up-down direction button to scroll for more translation contents.
2. If the display remains at the translation screen, you need not go back to the previous dictionary program screen. You can continue to scan in new word and it will replace the old word that you scan in before.

Translation From Single Simplified Chinese Word To English

If the Simplified Chinese word is scanned one at a time, the English translation will be shown after the Simplified Chinese word.

For example, when the Simplified Chinese word “扫” is scanned, the translation screen display will be as shown below.



1. Different translations will be separated by the punctuation “;”. Use the up-down direction button to scroll for more translation contents.
2. If the display remains at the translation screen, you need not go back to the previous dictionary program screen. You can continue to scan in new word and it will replace the old word that you scan in before.

Translation From Single English Word To Traditional/Simplified Chinese

If you scan in a single word at a time, the screen displays two rows after scanning. The top row shows the single English word and bottom row shows the Traditional/Simplified Chinese translation.

For example, when the single word “row” is scanned, the translation screen display will be as shown below.




1. The single English word that is scanned in will have its word and translation shown on the display screen.
2. Press up-down button to scroll the screen to check for more translation.
3. Press **ENT** and the English word will be read out aloud.
4. If the display remains at the translation screen, you need not go back to the previous dictionary program screen. You can continue to scan in new word and it will replace the old word that you scan in before.
5. Word with multiple meanings: When the single word being scanned has two or more translation, Super ScanEYE will list out all the translation and give each translation a number.
6. Word Listing Symbol: When a single word has multiple meanings,  will be shown at the top right-hand corner of the screen. Press **ESC** and the word listing will be shown. Select one of them from the list and check its translation.

(A). Words with multiple meanings.

Example: “row” has three different meanings. After scanning, press **ESC**, the screen will show the screen as follow.

Select “row2”, press **ENT** and it shows the second translation of “row”.

Select “row3”, press **ENT** and it shows the third translation of “row”.

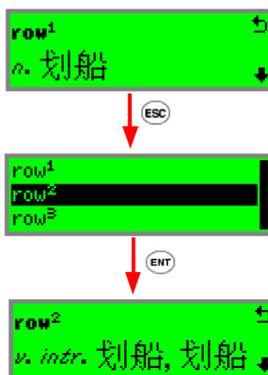

(B). Single word with multiple related words

Example: “walking” (adjective) is related to “walk” (verb). When “walking” is scanned in the translation screen will have a symbol , indicating there are other related words and other translations available. Press **ESC** and enter the word listing menu. Select the word then press **ENT** to read the translation.



4.3 Phrase Translation

Translation From Chinese Phrase To English

After scanning in the Chinese phrase, this phrase will be shown on top of the screen. The first word of the phrase will be shown in reverse-white format. The bottom of the screen will show the translation for this phrase. Press the up-down direction button to scroll for more explanation related to this phrase. After the explanation of the phrase, the screen will show the English translation for the individual reverse-white Chinese word.

Press **ESC** to return to the screen where the phrase is shown. Press the left-right direction button to view the translation for the individual word.


Example:

Scan Chinese phrase “資料”.

The top of the screen will show “資” in the reverse-white format and the bottom of the screen will show “資料 information”. Press the up-down direction button to scroll for more explanation.

After the explanation of the phrase, the screen will show the English translation for the reverse-white Chinese word “資”.

Press **ESC** to return to the screen where the phrase “資料” is shown. Press the left-right direction button to convert “料” into reverse-white format to view the English translation for the word “料”.

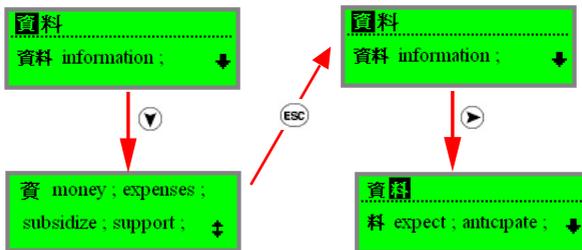



Translation From English Phrase To Chinese

After scanning in the phrase, this phrase will be shown on top of the screen. The first word of the phrase will be shown in reverse-white format. Press **ENT** and see the translation for this phrase.


In the translation screen, the top right-hand corner has the symbol , press **ESC** to obtain the related words and read its related translation.

Example:

Scan in the phrase “take out”.

The top portion of the screen shows “take” in reverse-white format and below shows again take out in the normal format.

Press **ENT** to view the translation screen for the phrase “take out”. If you want to check the translation of the single word “take”, press **ESC**. Then you can view the word list menu. Next select the single word “take” and press **ENT** and you can view the translation of “take”.

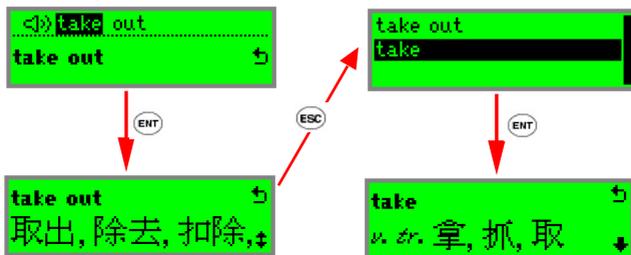

4.4 Sentence Translation

Translation From Chinese Sentence To English

After scanning in the Chinese sentence, this sentence will be shown on top of the screen. The first word of the sentence will be shown in reverse-white format. The bottom of the screen will show the translation for this word.



1. Use the left-right direction button to scroll and view the sentence scanned.
2. If the word in reverse-white format does not form a phrase with the next word, the English translation for the word will be shown below; if the word in reverse-white format form a phrase with the next word, the English translation for the phrase will be shown below. Please refer to section 4.3 on how to view the word translation and phrase translation.

Example: Scan in the Chinese sentence “掃譯筆是很實用的掃描翻譯工具”. In this sentence, “實用” is a phrase. When “實” is in the reverse-white format, the bottom of the screen will show “實用” and the English translation “實用 practical”.




3. Press the up-down direction button to scroll and view the translation contents.
4. Press **esc** to return to the screen where the sentence is shown. Next press the left-right direction button to scroll for translation of other words.
5. If the screen is still at the translation display mode, you need not return to the previous dictionary display mode. You can continue to do scanning. The current words will be replaced by the newly scan-in words.



Translation From English Sentence To Chinese

If you scan in one whole sentence at a time, the top of the screen will show the sentence you have scanned in. The bottom of the screen will show the translation of the reverse-white words of the sentence on top.



1. The whole sentence scanned in may not appear in full as screen space is limited. You can scroll left or right to view the sentence.
2. The English single word selected currently will be shown in the reverse-white format. If it is a single word, the Chinese translation will be shown below. If it forms a phrase with the word next to it, the bottom will show this English phrase. Please refer to Section 4.3 method to check the Chinese translation of the phrase.

Example: Scan in the sentence “They moved in yesterday”. Since “move in” is a phrase, when “move” is shown in reverse-white format, the bottom of the screen will show the phrase “move in”.



3. Press the up-down button to scroll for the translation.
4. Press **(ENT)** and you can check the translation of the single word “move”.
5. If you activate the “automatic reading” (please refer to section 4.5), whenever single word is shown in the reverse-white format, this word will be read aloud. If you want the device to read aloud the whole sentence, please scroll to your leftmost screen until the speaker icon becomes reverse-white format.
6. If the screen is still at the translation display mode, you need not return to the previous dictionary display mode. You can continue to do scanning. The current words will be replaced by the newly scan-in words.

4.5 Dictionary Program Function

As mentioned above, after you enter the dictionary program, you can scan in English words and check their Chinese translation. Press **(ENT)** to alter the dictionary functions required and press **(ESC)** to return to the scanning state.

1. Hear English Speech

Set the hear English speech to listen to its pronunciation. Only English voice reading is available currently. Press **(ENT)** to check and uncheck the automatic voice reading.

2. Set Scanning Direction

When scanning Chinese, you may set the scanning direction as Horizontal or Vertical.

3. Set Volume

Use up-down button to modify the volume.

4. Set Speaking Speed

Use left-right button to modify the speaking speed.

5. View Translated Words

Show the most recently English words being checked. Scroll up and down for these English words. Press **(ENT)** to check their Chinese translation.

6. Select Dictionary

You can select the translation dictionary you need from those that you have installed.

Attention: History record can store 80 single words at most. When the storage is full, the earliest scanned English word will be deleted as newer words will be stored.




Chapter 6 Data Transfer

We can upload the data to the computer to do editing and printing.

6.1 Super ScanEYE Program

Go to “Start”/ “Program” / “Super ScanEYE”/ “Super ScanEYE” to open the Super ScanEYE program. The bottom right-hand corner will show the Super ScanEYE icon

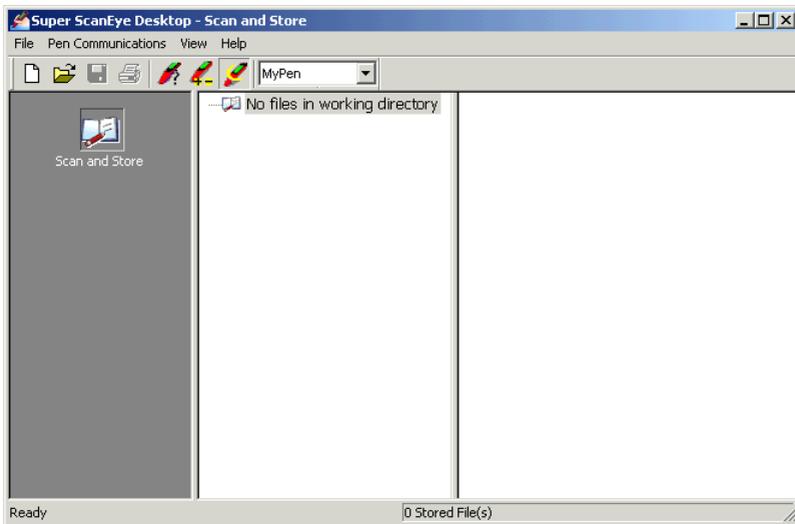

6.2 Connecting Super ScanEYE to PC


You can use the Super ScanEYE connection wizard to automatically set the connection between Super ScanEYE and PC or you can manually set the connection yourself.

Connection Wizard

1. Connect one end of the USB cable to the computer USB port and the other end to the Super ScanEYE connection pin.
2. From Super ScanEYE manager menu, select “Read Me”/ “Connection Wizard” to open the connection wizard window.




3. Please follow the steps shown in the diagram below in order to complete the connection between Super ScanEYE and the computer. From the Super ScanEYE Main Menu, press “Options”/“Advanced Options”/“Enter Upgrade Mode”. Press **ENT** to enter “In upgarde Mode.”

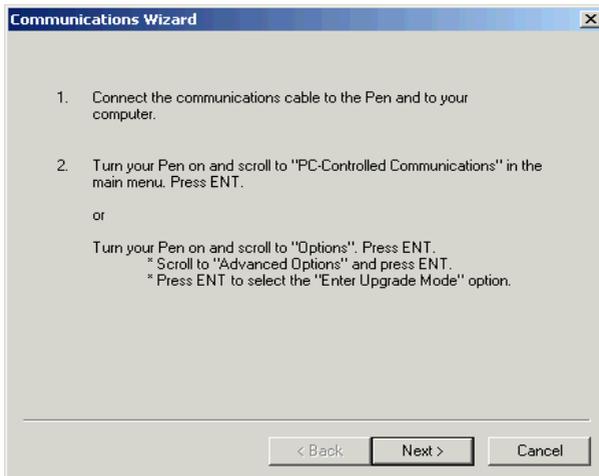



4. Press “Next” to detect the connection.

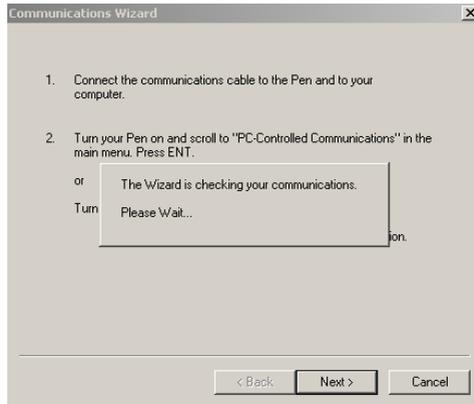


5. Press “Next” to Finish the connection.



Manual Connection


Please use manual connection only when connection wizard is unable to establish connection between Super ScanEYE and the computer.

1. Connect one end of the USB cable to the computer USB port and the other end to the Super ScanEYE connection pin.
2. Set the Super ScanEYE Hardware “Advanced Options”. Power on the Super ScanEYE. From the main function menu, press “Options”, “Advanced Options” then “Set Baud Rate.” Set the Baud Rate at “11520”.
3. From the computer “Control”/ “System” / “Device Manager”, open “Device Manager”. Under the “Ports (COM & LPT)”, select "Prolific USB-to-Serial Comm Port", the communications port between Super ScanEYE and the computer.

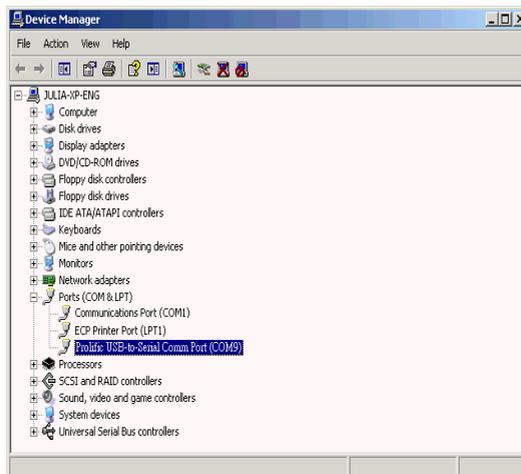




- Once the connection port is selected successfully, right-click on this communication port and select content to open “Communication port Properties” dialogue box. Next select “Port Settings” tab then set the bits per second to be 115200. Click “OK”.

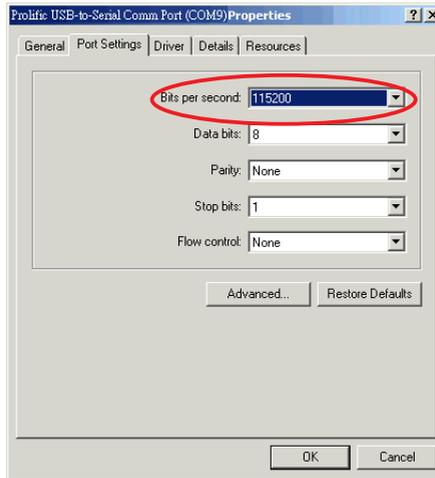


- From Super ScanEYE Manager function menu, select “Pen Communications”/ “communications settings” to open “communications settings” dialogue box.
- Set the serial port exactly like step 2. Next set the Baud Rate to be 115200. Press “OK” to complete the connection.

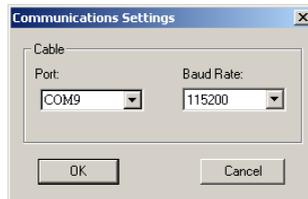

6.3 Data Transfer

Data Transfer Setting


From Super ScanEYE Manager function menu, select “Pen Communications” / Send Setting”. Alternatively click the icon at the bottom  right-hand corner of the computer screen, select data transfer to open “Send Setting” dialogue box.

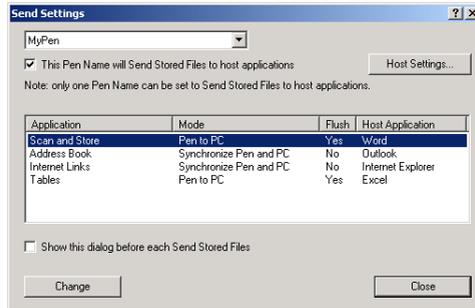

You can select the name for the Super ScanEYE that is connected to the computer.

Select one application program, click “modify” to open “modify data transfer setting” dialogue box. You can modify every application program data transfer mode. Some of the data transfer mode is disabled, depending on the individual application program.

1. Synchronize Super ScanEYE and computer data.
2. Upload data from Super ScanEYE to PC.
3. Download data from PC to Super ScanEYE.
4. Do not transfer any data.

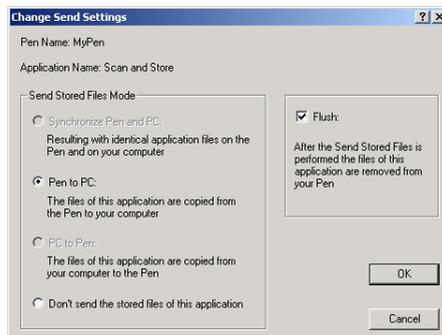




In the Scan and Store, only the function of uploading data from Pen to PC is available.

If “Flush” is checked, once the data is transferred from Pen to the PC, the data in Pen will be deleted.

If you want to simultaneously transfer data or synchronize data with other application software, such as Word, Outlook, please check “Pen to PC”, then press “Host Setting”, then select the application software that you want to transfer data or synchronize data.

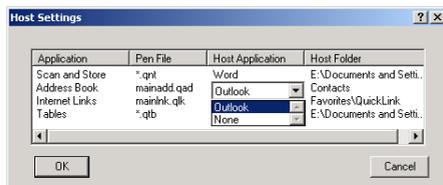

Transfer Data

When you have completed all the above steps of hardware and software setting, power on Pen, select “Main Menu” / “Send Stored Files to PC” and press **ENT**. The system will execute according to what transfer mode you have previously selected and begin the data transfer between Pen and PC. When data transfer is completed, a prompting screen stating “Data transfer completed successfully” will appear. Click “OK”.



6.4 Edit Data Within Super ScanEYE Manager

Super ScanEYE manager has a Scan and Store editing page. By right-clicking the mouse on the notebook editing page, you can open the shortcut menu. You can also select the tools and function from the top to execute the same command.

When other software has been installed, such as communication record, webpage link and forms, there will be an editing page for each application. Identically you can edit the files within their editing page.

Edit Scan and Store


Select Scan and Store icon, and enter Scan and Store editing page. Then select one of the files, right-click to open shortcut menu and you can add or remove the selected files.



When you have chosen the file, the right-side space will show the file content. It is managed in paragraph with a maximum of 190 words in each program.

Select one paragraph and right-click on your mouse to open shortcut menu, where you can open, delete or edit the chosen paragraph.

You can also double-click on the paragraph to do editing for that paragraph.

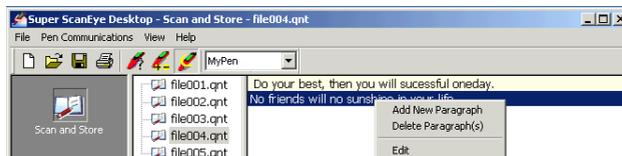

Chapter 7 Scan to PC

When the computer and Super ScanEYE are connected, Super ScanEYE can be used to scan words directly into applications, such as Word, Excel, Outlook.

1. Please make sure that Super ScanEYE manager on the computer is activated and the icon will appear at the bottom right of the screen.
2. Open the application software such as Word, Excel where you want to scan and input word.
3. Go to Super ScanEYE “main function” / “scan to computer”, enter “Begin Scanning” interface, as shown in the screen below.



By default, the system will scan in Traditional Chinese words horizontally.

You can click on the left-right direction button to select the scan language, including Traditional Chinese, Simplified Chinese and English.

In the Traditional Chinese or Simplified Chinese mode, you can click on the up-down direction button to select horizontal scan or vertical scan.


4. When the scan language and scan direction are selected, please refer to Section 4.1 scanning techniques to scan words into the computer.



Chapter 8 Additional Functions

8.1 Install Add-on Programes

1. Insert the installation CD-ROM, the system will automatically load the installation screen. Select “Super ScanEYE” / “I accept the terms of the licence agreement”.

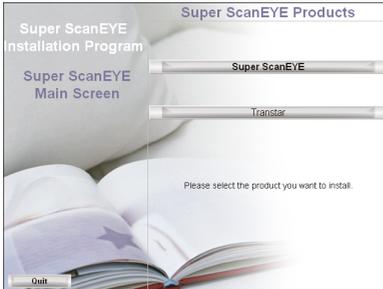


2. Please select “Add-on Programs for Super ScanEYE”, then select the additional component that you want to install, such as “Address Book (for Pen and Desktop)”. (Here we use “install address book” as an example to explain the installation method.)







4. Please check that Super ScanEYE is connected correctly and is at the “In upgrade Mode”. Click “OK” to update the Super ScanEYE. When the Super ScanEYE has been successfully updated, please click “OK” to continue.

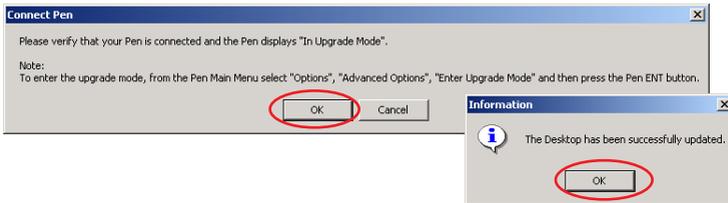

5. The installation program will ask whether you want to duplicate Super ScanEYE component in the computer to do backup. Click “Yes” to duplicate Super ScanEYE component under the Super ScanEYE installation content.

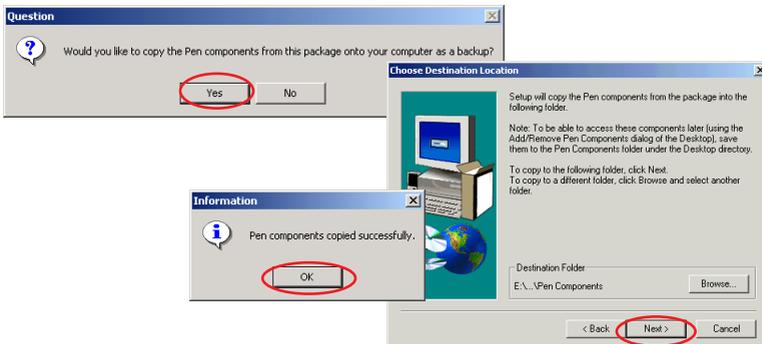

6. New Add/ Remove Pen component history record interface will reflect the names of all the new add-on component. When the installation is completed, the successful upgrade screen will appear. Click “OK” to complete the installation.

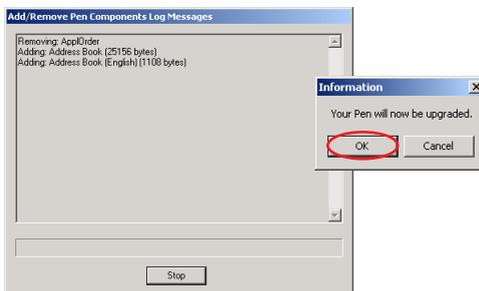

7. The other additional component installation is similar as the above mentioned.

8.2 Address Book Component

Select “Main Menu”/ “Address Book”, press **ENT** to enter address book function menu.

You can input new address book or view existing address book. **New Address**

1. Using up and down button to select new address, press **ENT** and you can add a new blank document.
2. Use the up and down button to select the space, such as name, designation, company, address, telephone, and use the Super ScanEYE to scan in the information. The information will be saved after the recognition process is completed.
3. Every input scanning will replace the previous information of the category chosen. If you want to edit a category, press the directional buttons and enter the edit mode, then scan in the data.
4. Press **ESC** to open edit function menu.

ResumeEditing: Return to edit function.

Activate Overwrite Mode: Set the new input words.


Insert Line: Insert a blank new line at the cursor position.

Delete Line: Delete the line at the cursor position.

Clear Line: Clear the line of content at the cursor position.

Scanning Options: Set the words of scanning to be numeric, multiple line or vertical scan

5. At the edit mode, press **ENT** to open the list of letters and symbols, in order to key in or delete English words, numbers, punctuations or symbols.





- Upon completion of editing, select “OK” and press **ENT** to return to address book function menu. The edited information will be saved automatically in the address book. You can also press **ESC** to select whether you want to save the information, then press **ENT**.



Word / Symbol List:

- English Letter: Move the cursor to select a letter and this letter will be shown in reverse-white format. Press **ENT** to key in the letter at the cursor position. When the letter is the reverse-white format, you can press the up-down button to select the different representation of the letter.
- Punctuation: Use the left-right button to select the punctuation icon and press **ENT**. Next select the punctuation and press **ENT** to key in the punctuation.
- Number: Use the left-right button to select the number icon and press **ENT**. Next select the number and press **ENT** to key in the number.
- Single Symbol / Multiple Symbol: Set single symbol input or multiple symbol input. If single symbol input is chosen, only one symbol can be key in, before the symbol list is closed and returned to edit mode. If multiple symbol input is chosen, you can key in multiple symbol. Press **ESC** to close the symbol list and return to edit mode.
- Delete Symbol: Delete the reverse-white symbol.
- Space: Insert a blank space at the cursor position.

View Addresses

Using up-down button, select “view address book”, then select the name of the address book that you want to view. Press **ENT** to view the details by scrolling up and down the category of contents.



Press **ENT** to enter the edit mode. Press **ENT** again to open word / symbol list and do edition manually by keying in the data, or press **ESC** to open edit function menu.

Settings

Use the up-down button and select “settings”. Press  to open the setting function menu.

1. Scroll Screen: Set whether to show the scrolling effect when screen goes to the next line.
2. Auto Advance: After scanning in the data for a certain category, automatically skip to the next category.
3. Auto Name: After scanning in the English name, automatically save the surname and name in two different space.
4. Next Address Language: Set Super ScanEYE recognition language. Default language is traditional Chinese.
5. Select Fields: Set the categories that allows input and modification. Tick those categories that you want to be shown.
6. Field Settings: Set the category type and the data it can key in, such as number or multiple lines.



For Super ScanEYE that is receiving data, select “Receive Address” and press **(ENT)**.



Edit Address Book in Super ScanEYE Manager

Select “Address Book” icon and go to edit address book interface. The space on the right will show the address book content.

Select one of the address data and right-click to open shortcut function menu and you can edit the data.



8.3 Internet Link Component

Select “Main Menu” / “Internet Link”. Press **ENT** to enter Internet Link function menu.

You can insert new link, view existing link, set the viewing method and also name the language of the link.

New Link

1. Using up-down button, select new link. Press **ENT** to add a new webpage link.
2. Use Super ScanEYE to directly input data into the cell chosen. The data will be saved in the cell after recognition. Please input the webpage information at “Internet Link” and input the description at the “description space”.
3. Every input scanning will replace the previous input. If you want to further edit certain category, you can use the direction button to enter edit mode of that category and scan in the data.
4. Under the edit mode, press **ESC** to open word/symbol list.

Attention: Refer to Section 8.2 if you want to scan in input under edit mode, make use of edit function menu or make use of word/symbol list to key in word/symbol.

5. After completion of editing, press up-down button and select “confirm”. Press **ENT** to return to Internet Link function menu and the data will be saved in the Internet Link.

You can also press **ESC** to select whether to save the Internet Link, then press **ENT**.

View Link

Using up-down button, select “view link”. Press **ENT** to enter the list of webpage link. Select the webpage you want to view and press **ENT** to view the details of the webpage. Press **ENT** to enter edit mode, you can edit the webpage link data. Press again to open word/symbol list. Press **ESC** to open edit function menu.

Settings

Use up-down button to select “settings”. Press **ENT** to go to setting function.

1. Scroll Screen: Set whether to show the scrolling effect when the screen is changing lines.
2. Auto Scrolling: After scanning in data for a cell, automatically jump to the next cell.




3. Internet Link Abbreviation: When you scan in the webpage, if you leave the description blank, the computer will automatically duplicate the Internet Link information on the “description” category. Select Internet Link Abbreviation will duplicate only the company's name in the description cell.
4. Next Link: Set the scanning language. The default language is Chinese Traditional.

Edit Webpage Link in Super ScanEYE Manager

Select “Internet Link” icon, go to webpage link edit. The right-hand side space will show the content of the Internet Link.

Select one of the link, right-click the mouse to open the function menu to add, delete, edit or open the Internet Link.

You can also double-click on the Internet Link to do editing.

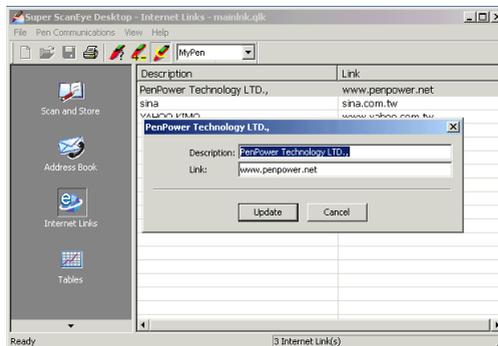

8.4 Tables

Select “Main Menu”/ “Tables”. Press **ENT** to enter form function menu. You can add, open, edit or delete the files and also set the viewing method and set the language for new files.

Edit Current File

1. Use up-down button to select “Edit Current File”. Press **ENT** and begin edition of the current form data.
2. Use direction button to select the cell that needs to be edited. Use Super ScanEYE to scan in data into the cell. The data will be saved after the recognition process.
3. Every input scanning will replace the previous data that is scanned. If you want to edit a certain category, press **ENT** to go to the edit mode of that category, the scan in the data. In the edit mode, press **ENT** to open word/symbol list. Press **ESC** to open edit function menu.

Resume Editing: Return to edit mode

Activate Overwrite Mode: Set new input of words, insert cursor position or replacement of words.

Clear Line: Delete the contents of the category cell chosen.

Select Language: Set the scanning language core. The default language is traditional Chinese.

Scannign Options: Set the category input as numbers or multiple lines

Insert line: Insert an empty Row at the cursor position.

Insert Column: Insert a column at the cursor position

Delete Line: Delete entire line at the cursor position.

Delete Column: Delete the whole Column at the cursor position.

4. Press left-right button to select column. Press up-down button to select row.
5. Upon completion of input scanning, press **ESC** to return to the function menu of the form.



Settings

Use up-down button to select “setting”. Press **ENT** to open set function menu.

1. Scroll Screen: Set whether to show the scrolling effect when the screen goes to the next line.
2. Auto Advance: After scanning input for a category, automatically skip to the next category.
3. Right-to-Left Table: Set the data in the category cell to align on the right.

New File

Build a new table document

1. Using up-down button, select “New File”. Press **ENT** and key in file name.
2. Directly scan in the file name, press **ENT** to enter edit mode. Press **ENT** again to open word/symbol list and manually key in the English word and symbol. Press **ESC** to open edit function menu.
3. Upon completion, press the direction button to select “OK”. Press **ENT** to enter the form editing interface.

Open File

Open an existing form document. Use up-down button to select “Open File”. Press **ENT** to enter open existing file interface. Use up-down button to select the file name that you want to open. Press **ENT** to open the form.


After usage, select “Edit Current File” and all the modified data will be saved in the form.

Delete File

Delete an existing form document. Use up-down button to select “Delete File”. Press **ENT** to enter cancel document interface. Use up-down button to select the file name for removal. Next press **ENT** to delete the form.

Edit Tabel in Super ScanEYE Manager

Select “Table” icon and go to form edit. In the middle column, select a file. You can right-click your mouse to open shortcut function menu to add or delete the chosen file. The right column will show the form content. Select a cell and key in data.

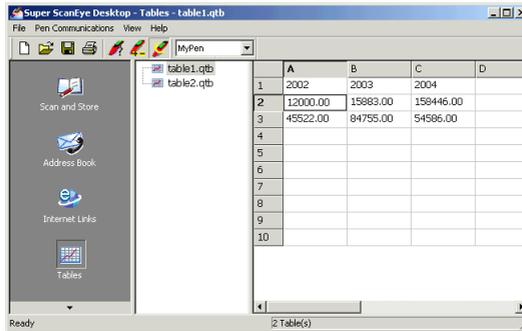




8.5 Add/Delete Software



Super ScanEYE has many application program software, such as Address Book, Internet Links, Talbe. You cab add or delete these software according to your needs.

1. Duplicate those new software that you need on the computer, within Super ScanEYE Manager installation content page “Super ScanEYE Desktop” / “Pen Components” data file.
2. Connect Super ScanEYE with the PC. Select “Main Menu” / “Options” / “Advance Options” / “Enter Upgrade Mode”.
3. Execute within Super ScanEYE manager “Pen Communications” / “Add/ Remove Pen Communications”.
4. The computer will auto detect the connected Super ScanEYE, and open “New/Delete Super ScanEYE software” dialogue box.

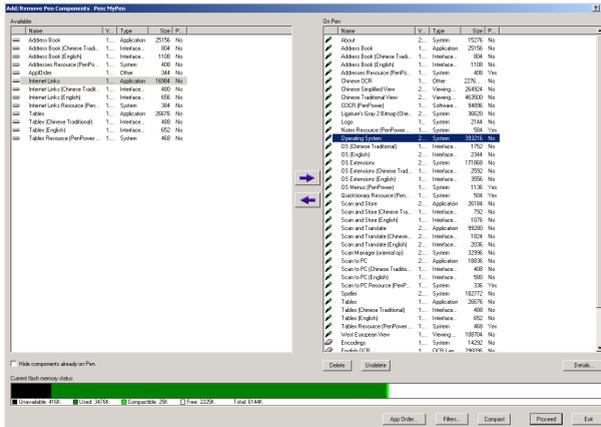


8.6 Install External Dictionary

1. Insert the installation CD-ROM, the system will automatically load the installation screen. Select “Super ScanEYE”/ “I accept the terms of the licence agreement”.

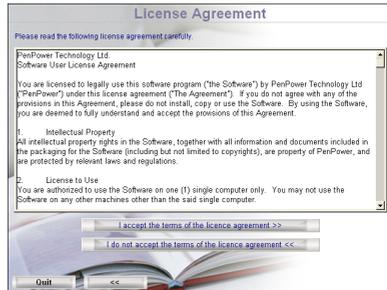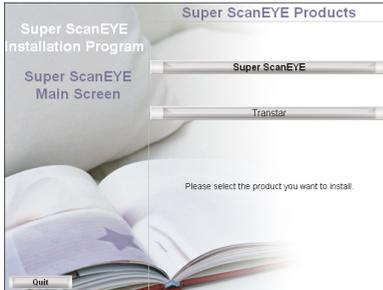

2. Please select “Add-on Programs for Super ScanEYE” / “Dictionaries (for Pen)”. Then, select the dictionary to be installed.

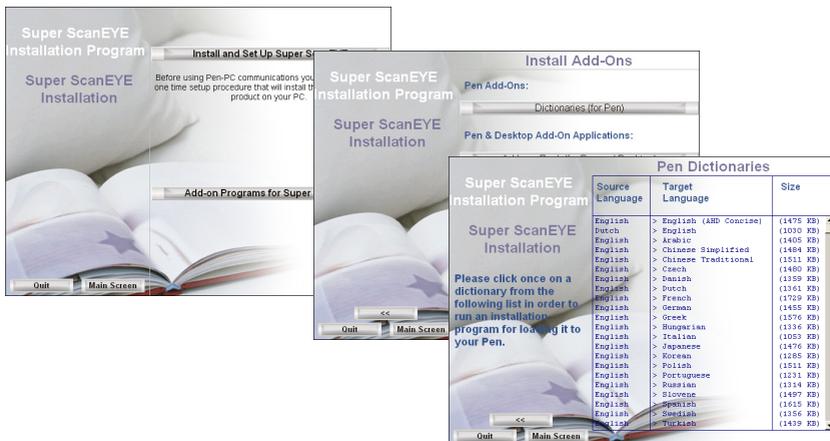

3. The follow-up installation steps are similar to those of other components. Refer to Installation Steps in Section 8.1 for installation.



8.7 Transtar


Note: The Transtar application that comes with the SuperScanEYE package can only be installed and used under Traditional Chinese or Simplified Chinese environment but not under English environment. The following shows the installation and usage under Traditional Chinese environment and acts as a reference for you.

Installation

1. Insert the installation CD-ROM, the system will automatically load the installation screen. Select the interface language.




2. Then, proceed according to instructions of Setup Wizard to complete the installation.

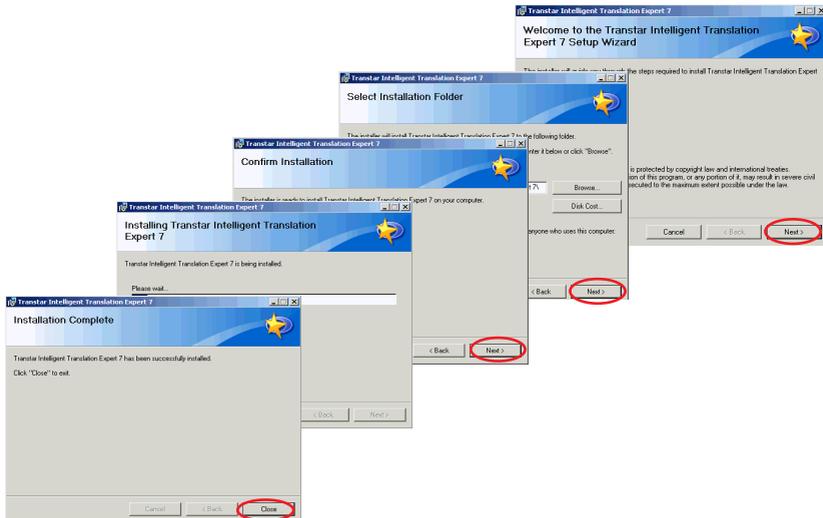

3. After the installation is completed, there will be a “TranStar ITE”  button on the computer desktop, and a new “Transtar Intelligent Translation Expert” option in the Programs.

Initiating Transtar

Double click on the  quick-start icon to initiate Transtar Intelligent Translation System. Now, a  icon will appear on the computer desktop, and a small  icon will also appear in the toolbar at the lower right corner of the desktop. Move the cursor to either icon, and click on the right mouse key. Now the Transtar menu is opened.

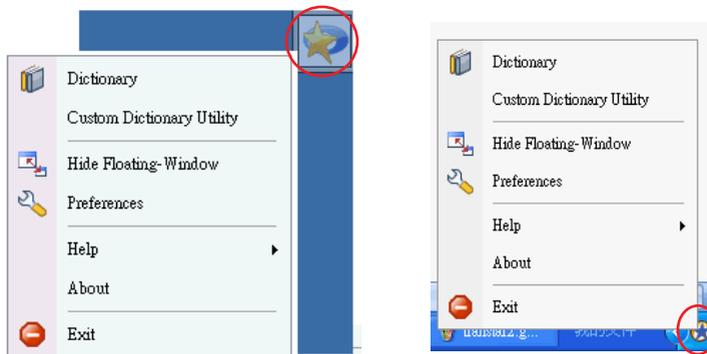

How to Use Transtar

Move the cursor to the  icon and then click and hold the left mouse button.

The cursor will change to .

Drag this cursor to the word you want to translate and release the cursor. The corresponding translation and related result will be displayed on the screen.



For further detailed information, please refer to the user manual, provided by Transtar.



Penpower Super ScanEYE V2.4 User Manual

Penpower Technology Ltd.

Release: April, 2011