

1. Product Description

WorldPenScan WiFi is a portable scanning translation pen that is easy to carry.



Use WorldPenScan WiFi to connect to the Internet, you can scan words on your book, look up words, translate, and learn by opening a web page on your mobile phone, tablet, computer, or Chromebook.

⦿ Package Contents

- Pen scanner x1
- Type-C USB cable x1
- Quick guide and warranty card x1

⦿ Product Specifications

- Product Name: WorldPenScan WiFi
- Screen: 1.3 inches
- Capacity: 8 GB
- Lens: 2 mega pixels
- Use environment: -5° C ~ 45° C
- Product size: 132.5* 31.5* 14 mm
- Charging cable: USB Type-C
- Battery: 1200 mAh rechargeable lithium polymer battery

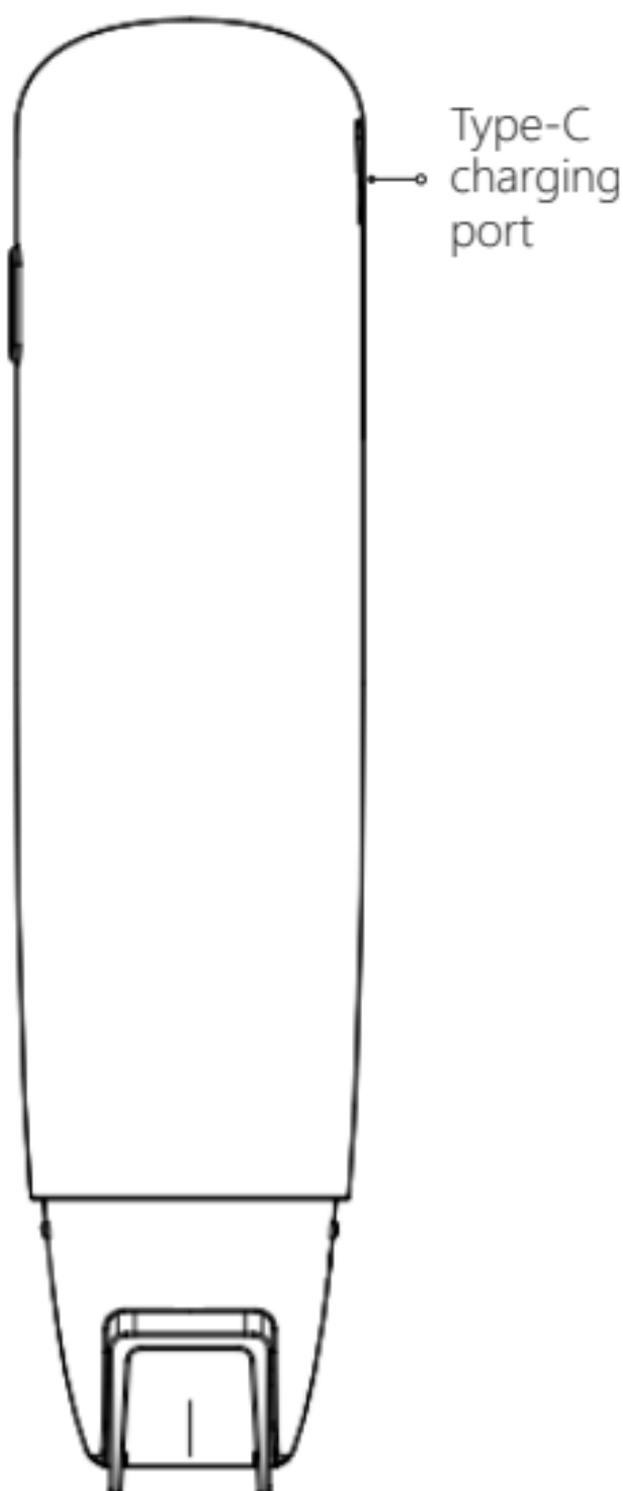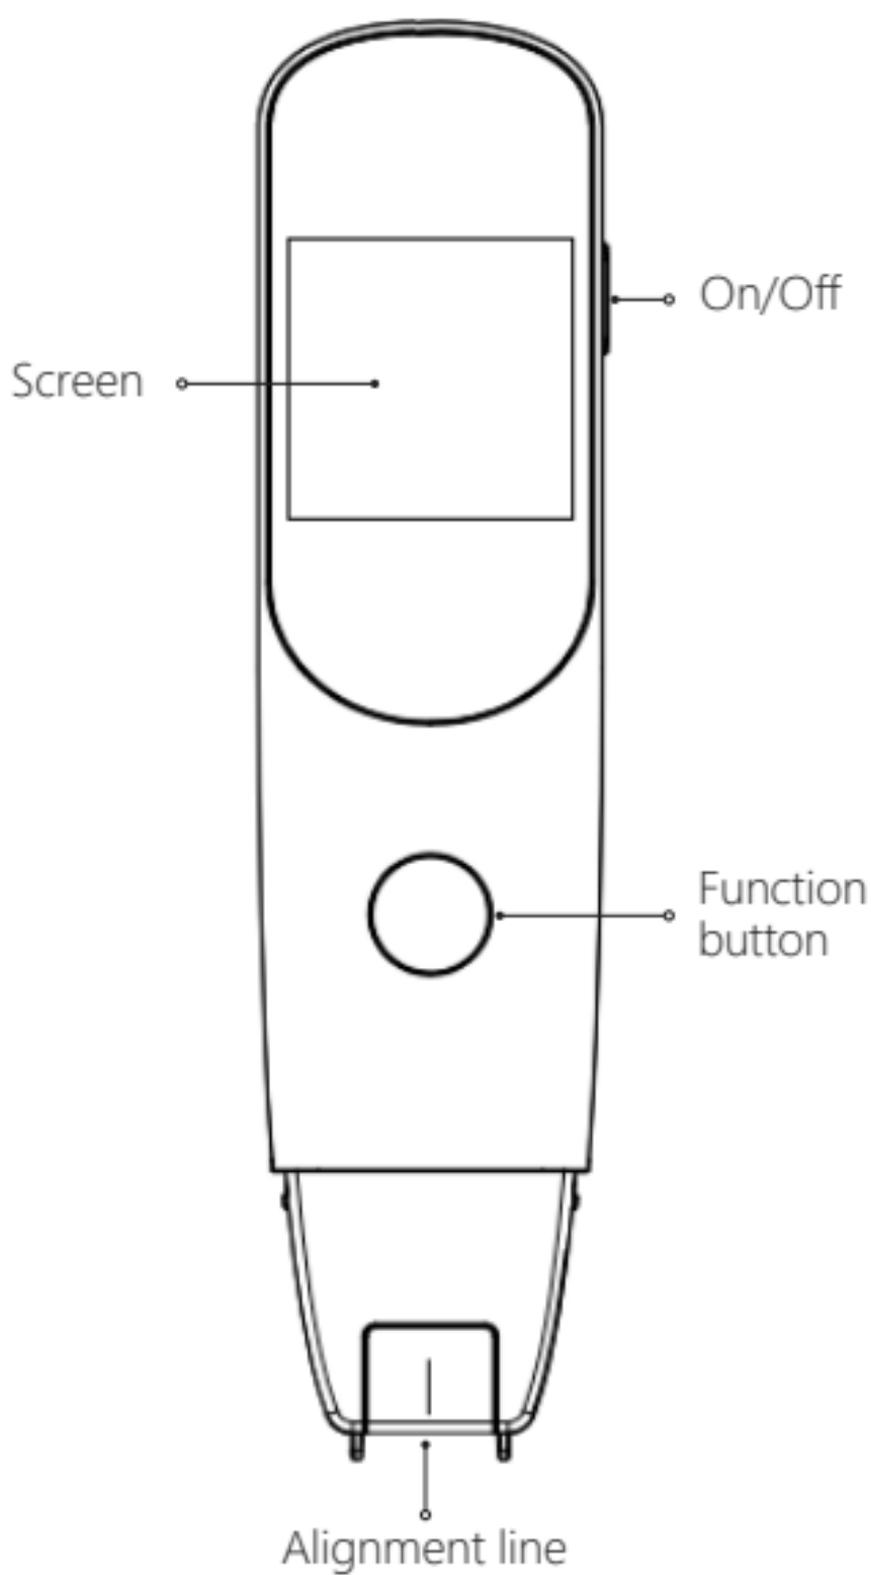

2. Function Introduction

⊙ Power On/Off

Long press the 【On/Off】 button for about 3 seconds.

⊙ WiFi Connection

After turning on the WorldPenScan , follow the initialization steps to set the WiFi of the device or click the 【Settings】 icon in the menu, select the 【WiFi】 item and open it, then select the WiFi you want to connect.

Note: When using this product outdoors, you can choose to use the mobile hotspot for WiFi connection.

⊙ Device Connection


• How to work with your mobile phone

Use the camera on your mobile phone and scan the QR code on the WorldPenScan to open the exclusive webpage, and then connect it to scan the text.




• How to work with your computer

Click the small keyboard icon at the bottom right of the screen of the WorldPenScan and follow the instructions to open the exclusive webpage (URL: <https://wps.evolaclass.com>) on your computer, then enter the ID on the device and click Connect to complete the connection.

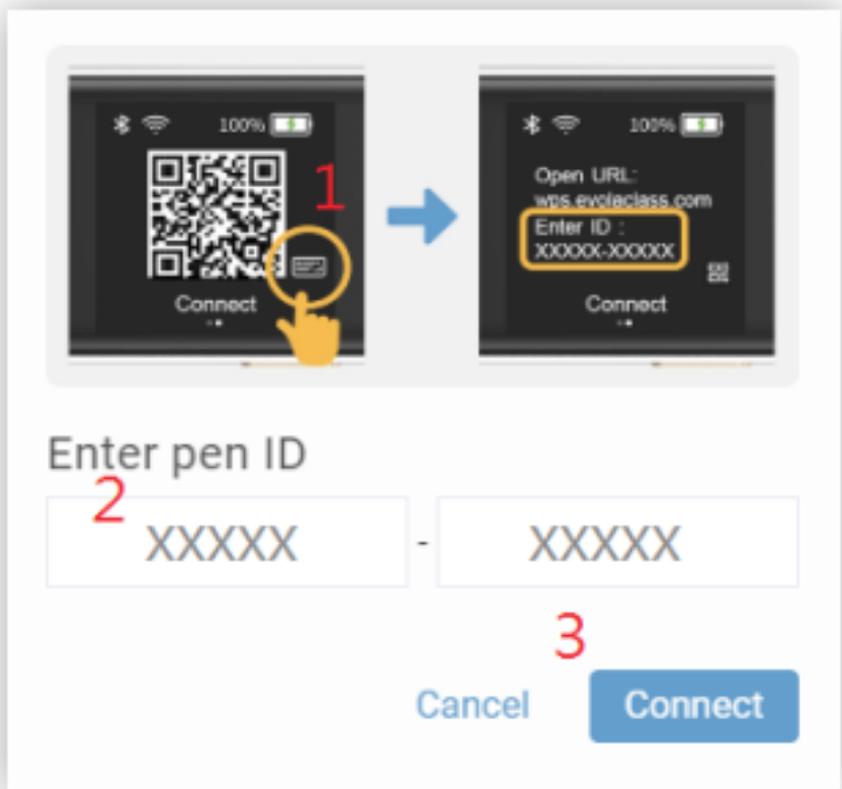

© How to Scan

Hold the WorldPenScan, aim the alignment line on the pen tip to the middle of the text, gently press down the pen tip to let the light bright up, then drag the pen to the right at a steady and constant speed, and lift the pen at the end of the text to finish scanning.

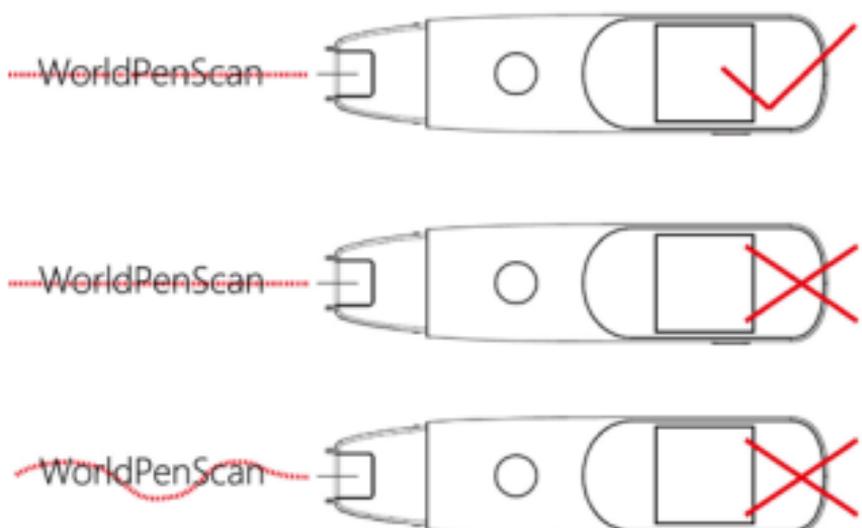

Note: It is recommended to keep the WorldPenScan at an angle of 60-80 degrees from the surface of the paper while scanning.



© Function Description

WorldPenScan WiFi needs to be used with the exclusive webpage which provides Text capture, Instant translation / Dictionary lookup , and Immersive reader mode, etc. Users can operate the functions based on their needs.

· Text Capture

Click the  (Text capture) button for using the 【Text capture】 function and start scanning the text to extract the text content. After completion, you can use the 【Immersive reader mode】 function to help you reading, 【manage】 and 【export】 the scanned data.

Note: If you need to directly scan text to MS Word and other application software, please click the  (download software) button to download and install the client (Windows /Mac) software, after the connection is successful according to the instructions, you can start scanning.

· Immersive reader mode

Click the  (Immersive reader mode) button for using the 【Immersive reader mode】 function, which provides functions such as automatic read-aloud following, line focus, reading mode setting, and full-screen display to enhance your concentration and comprehension while reading.

Note: Please click the  (More functions) button first, before using the 【Immersive reader mode】 function when operating on the mobile phone.

· File management

Click the  (Sign in) button to open the login page of the exclusive web page. After the registration is completed and login with your account, the data of each scan will be automatically saved to the account.

Click the  (File management) button, which allows users to view the scanned data and users can also add, edit, delete, and rename files.

· Export

Click the  (Export) button and you can choose export the scanned data to a DocuINK application or save it as a MS Word (. docx) files.

Note: Please click the  (More functions) button first, before using the 【export】 function when operating on the mobile phone.

· Instant translation / Dictionary lookup

Click the  (Instant translation /



PenPower

Warranty Card

Thank you for purchasing
PenPower product.

Please register your product on
www.penpower.net/reg.html to
ensure warranty service:

- **1 Year Warranty**
- **Software Updates**
- **Technical Support**

Note:

- The warranty period begins on the purchase date, standard warranty period ends 12 months after the purchase date.
- Product warranty is limited to the origin of purchase. Users might pay a service fee when requesting warranty service in different country.
- A copy of the official invoice must be submitted as proof of purchase for warranty service.



PenPower

Warranty Card



Product Name: _____

Purchase Date: _____

Dealers Signature

PenPower Technology Ltd.

Global Operations:

USA	+1-510-897-6600
Taiwan	+886-2-2778-1922
Hong Kong	+852-2111-1548
Beijing	+86-10-8287-3871

www.penpower.net

Dictionary lookup) button for using the 【Instant translation / Dictionary lookup】 function to translate whole sentences or paragraphs and look up definitions of words.

- **Instant translation:** You can scan the entire sentence or a paragraph to get the translation.
- **Dictionary lookup:** After selecting the dictionary you want to use, you can scan the word to look up the definition of the word.


• Connection status of the WorldPenScan

 which means the device is connected to the exclusive web page; otherwise,  which means it is not connected. Click this button to view information about the device (WorldPenScan ID, firmware version, battery), disconnect/connect, clear the connection history, and set the hotkey and pen holding mode.

◎ USB Charging

When the system prompts that the battery is low, please charge it in time.

It takes 3 hours to charge the pen.

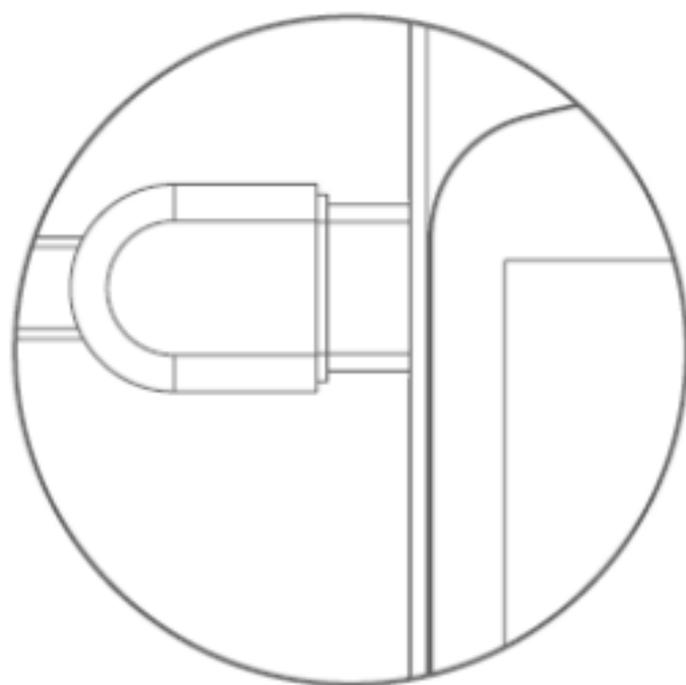

Please use the specific USB Type-C cable with the certified DC5V---1A adaptor to charge.

⦿ **Settings**

Slide from right to left on the screen of the WorldPenScan WiFi to see the **【Settings】**. After clicking it, you can set the WiFi, Brightness, Language, Pen holding mode, Auto shutdown, Standby time, Reset and Upgrade.

3. Usage Notice

⦿ **Safety**

- This product is strictly prohibited from being exposed to direct sunlight or extreme environments such as high temperature and heat.
- This product is not a toy. It is not suitable for children under 4 years old to use alone. Children should use this product with their parents.
- Do not soak this product and its accessories in liquid.
- Before using the charger, you must check whether the wires, plugs, shells and other parts are damaged. If damage is found, stop using it until the repair is complete.
- This product can only be used with the recommended power supply (recommended power supply specification: 5V-1A), and the power supply that compliance with certification specifications and meets the standard requirements

should be used.

- Built-in 1200mAh lithium polymer battery cannot be removed or replaced. If damaged, please contact after-sales service and repair it.

- The charger is used by or under adult supervision.

- For the safety of you and your children, we have made charging protection and cannot be used while charging.

Cautions

1. Non-professionals are not allowed to replace the battery. If the battery is replaced incorrectly, there will be a safety hazard.

2. Only use the same type or equivalent type of battery to replace.

3. For your safety, please do not expose the battery in the product to overheating environments such as the sun or fire.

© Troubleshooting

Error	Solution
Boot failed	Charge the pen
Touch screen doesn't respond	Long press the power button for 10 seconds to force shutdown and boot again
No scan results	Scan with the correct pen holding posture

Others	Contact customer service https://www.penpowerinc.com/en/customerServices/contactus 
--------	--


For more detailed answers to frequently asked questions, please go to the following website and select the product you purchased to inquire:

<https://penpower.zendesk.com/>



WorldPenScan WiFi

User Manual

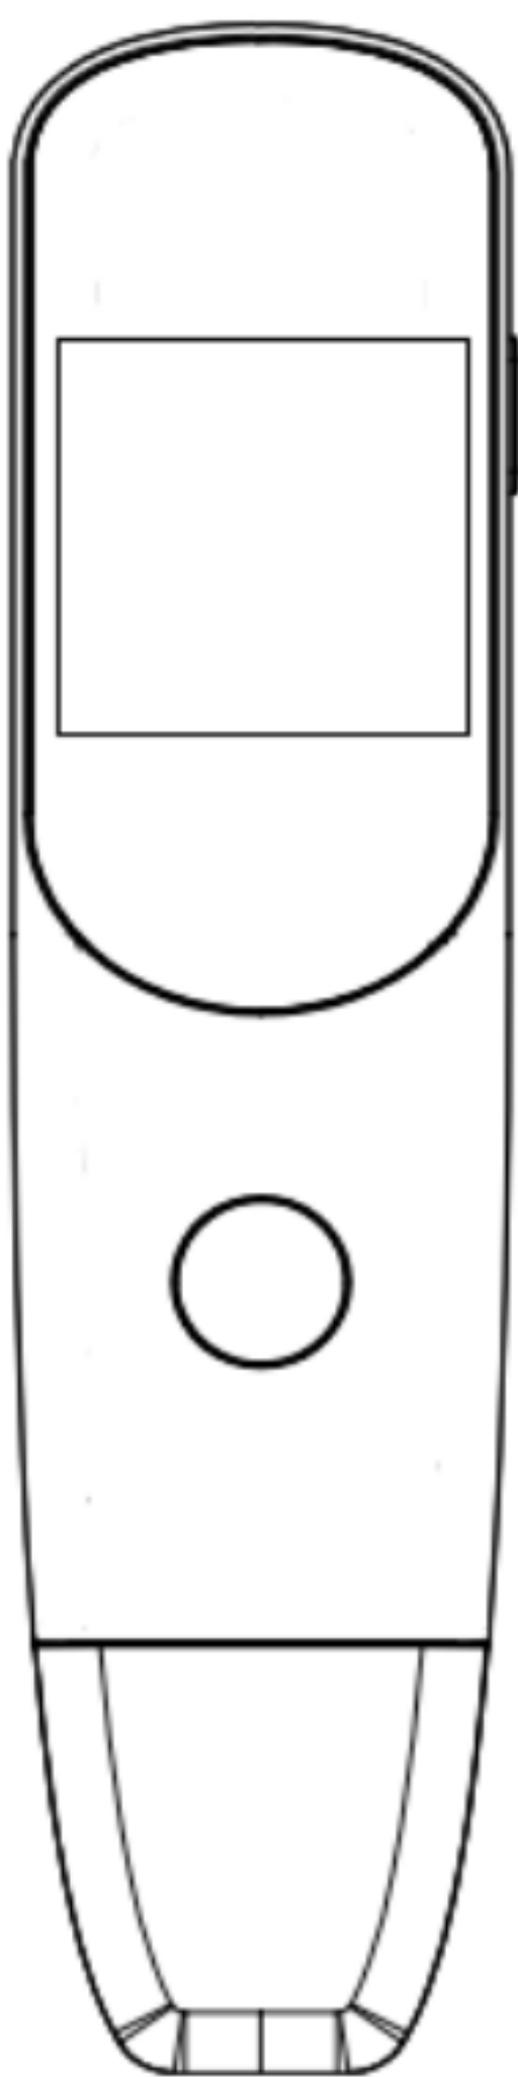

This manual contains important information, please keep it for future use.

